

PREMIER WATER TANKS

ON-ROAD TRUCK WATER TANK OPERATING INSTRUCTIONS

- 1 Grease water pump daily.
- 2 Check the tank to make sure no foreign material is inside. Remove any debris that could clog the outlets or damage the pump.
- 3 Take note of the tank's gallon capacity and the truck's GVW—do not overfill the tank.
- 4 Be sure all switches on the in-cab control box are in the "off" position.
- 5 Inspect hoses and valves. Check the level of hydraulic oil and the filter.
- 6 At an idle, engage the water pump by turning the hydraulic lever to the "on" position.
- 7 When you're ready to begin spraying, switch the sprayhead(s) to the "on" position. The sprayheads and water cannon are labeled on the control box inside the cab.
- 8 Water trucks with their tank at full capacity may experience changes in maneuverability. Please operate with caution.
- 9 When you are finished spraying, return the truck's motor to idle. Turn off all sprayhead switches and disengage the hydraulic lever or switch for the water pump..

DO NOT leave water in the tank for an extended period of time.

We recommend covering the manhole and vent opening when truck is not in use.

NOTE: *Never run the pump when tank is out of water. Damage to the motor and pump could result.*