

PREMIER WATER TANKS

ON-ROAD TRUCK WATER TANK OPERATING INSTRUCTIONS

- 1 Check oil & fuel daily.
- 2 Check the tank to make sure no foreign material is inside. Remove any debris that could clog the outlets or damage the pump.
- 3 Take note of the tank's gallon capacity and the truck's GVWR—do not overfill the tank.
- 4 Be sure all switches on the in-cab control box are in the "off" position.
- 5 While stopped and the water pump is on, turn spray heads to the "on" position.
- 6 Insert Water Tanks at full capacity may affect the maneuverability of the tow vehicle. Please operate with caution.
- 7 Exit the truck safely and turn the pump to a low idle when finished spraying. Once at a low idle, the pump is ready to be shut down.

DO NOT leave water in the tank for an extended period of time.

We recommend covering the manhole and vent opening when truck is not in use.

NOTE: *Never run the pump when tank is out of water. Damage to the motor and pump could result.*